Electristove DLX Spectre LS Electric Stove

E-DLX SPECTRE -B-104 6851 -EDXSPECTRE

Packing Checklist - Pack 1 of 2

Electric Stove with Log Store. Remote Control
Handset* with wall mounting bracket.
Instruction Manual

Packing Checklist - Pack 2 of 2

Real wood logs set

***THIS PRODUCT REQUIRES 3 X AAA BATTERIES FOR USE IN THE HANDSET**

IMPORTANT

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION AND USE OF THIS ELECTRIC STOVE AND RETAIN FOR FUTURE REFERENCE.

Children of less than 3 years should be kept away unless continuously supervised.
Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
This appliance is not intended for use by persons (including children) with reduced physical, sensory or learning disabilities, or lack of experience and knowledge, unless given supervision or instruction concerning use of.
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

IMPORTANT SAFETY ADVICE

WHEN USING AN ELECTRICAL APPLIANCE, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING IMPORTANT SAFETY ADVICE.

DO NOT cover the heater, to avoid overheating of the product.

DO NOT leave the heater unattended while it is in use. Always turn the appliance to the OFF position and switch off at the mains socket when not in use.

DO NOT leave children unsupervised whilst the appliance is switched on.

DO NOT operate this appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any way. Contact the manufacturer.

DO NOT install a timer switch to operate the appliance.

DO NOT use this appliance as a freestanding appliance. It must always be securely fixed in accordance with the manufacturer's instructions.

DO NOT insert or allow objects to enter any ventilation or exhaust openings on the appliance. To prevent a possible fire do not block air intakes or exhaust openings in any manner.

DO NOT place this appliance near flammable materials, surfaces or substances, as there may be a risk of fire. Keep flammable materials, surfaces or substances at least 1 metre away from the front of the product.

DO NOT switch on the fire if volatile vapours are present in the room.

DO NOT use this appliance in any areas where petrol, paint or other flammable liquids are stored e.g. a garage or a workshop as the appliance contains components capable of producing a spark.

DO NOT touch any hot surfaces such as the heater vent when the heater is in use to avoid burns and personal injury.

DO NOT install the heater immediately below an electrical socket outlet.

DO NOT use outdoors.

CAUTION - Some parts of this product can become hot during use and cause burns. Particular attention has to be given where children and vulnerable people are present.

This appliance is for household use only

PRODUCT TECHNICAL DATA SHEET

Supplier Name / Trademark	Celsi
Supplier Model Identifier	B-1046851 E-DLX SPECTRE LS
Voltage	230v AC 50HZ 13
Fuse	Amp 2.0kW
Nominal Heat Output (Measured)	1.0kW
Minimum Heat Output (Indicative)	2.0kW
Maximum Continuous Heat Output	28W
Auxilliary Electrical Consumption at Nominal Heat Output	28W
Auxilliary Electrical Consumption at Minimum Heat Output	1.5W
Auxilliary Electrical Consumption at Standby Mode	
Type of Heat Output / RTC*	With electronic room temperature control plus 7 day timer.
Other Control Options	With adaptive start control
Manufacturers Name and Address	BFM Europe Ltd. Gordon Banks Drive, Trentham Lakes, Stoke-on-Trent, Staffordshire, ST4 4TJ Tel: 01782 339000

*RTC = Room Temperature Control

Stove Dimensions - Fig. 1

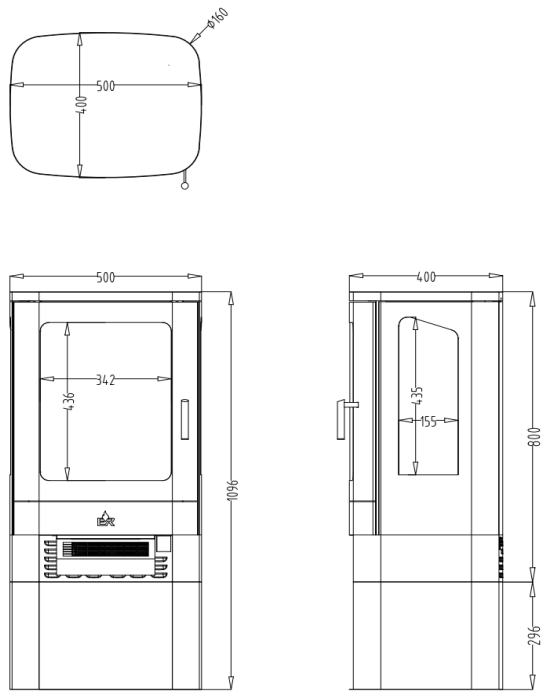

Unpacking

Remove and discard the plastic bag.
Be responsible when handling the packing materials.
Keep the original packaging for future transportation and/or storage.
Check all accessories are removed from the packaging before storing it away for future use.

KEEP PLASTIC BAGS AWAY FROM CHILDREN!

Choosing a Suitable Location

The stove must have a minimum clearance of 15mm to combustible material on all sides. A clearance of minimum 15mm to non-combustible materials is also required to ensure correct operation. For combustible material clearances please consult with the manufacturer.

This appliance is for indoor installation only and is not designed to be installed outside. The appliance must be kept away from any source of damp or moist conditions. Avoid any close contact with water. **Stove must be installed on a non-combustible hearth**.

If there is any doubt regarding the suitability of the installation site please contact your retailer.
The fire can be connected directly to a fused spur or plugged into a mains socket.
Ensure that the plug socket-outlet connection for this appliance is accessible. It MUST be readily accessible for easy electrical isolation in the event of servicing and replacing components etc.
This appliance **MUST NOT** be located immediately below an electrical socket-outlet.

Installation

Installation must be carried out by a qualified and competent person.

Connect the appliance to single-phase AC supply of the voltage specified on the rating plate.

Should the fire be connected directly into the mains supply, then a fused switched spur with a 13 amp fuse must be fitted.

It is imperative that the power supply is capable of handling the electrial load as stated on page 2 of this manual.

This appliance must be earthed.

Allow sufficient flex to enable the fire to be removed from the wall. **Do not use an extension lead.**

Always ensure that all electrical work complies with the relevant Building Regulations and the Electrical Code of Practice. All electrical work should be carried out by a qualified electrician.

ENSURE THAT THE HEATER ELEMENT OUTLET IS NOT OBSTRUCTED AND COMBUSTIBLE MATERIAL IS NOT PLACED IN FRONT OF IT.

Fitting the Logs

Take care when unpacking the Logs and the Ember Ice crystals supplied with your fire.

Open the door on the stove then remove the inner glass panel. To do this unscrew the fixing screws as indicated below in figure 2.

Fig. 2

Carefully lift out the glass panel and top glass retaining channel and store in a safe position.

Operating the Fire

This fire can be operated using 4 methods:

Manual Control using the controls on the fire
Remote Control using the included remote-control handset
Celsi App Control using smartphone or tablet voice control, Alexa or Google Assistant

Manual Control

This fire can be operated manually using the control panel as shown below in figure 3.

Fig. 3

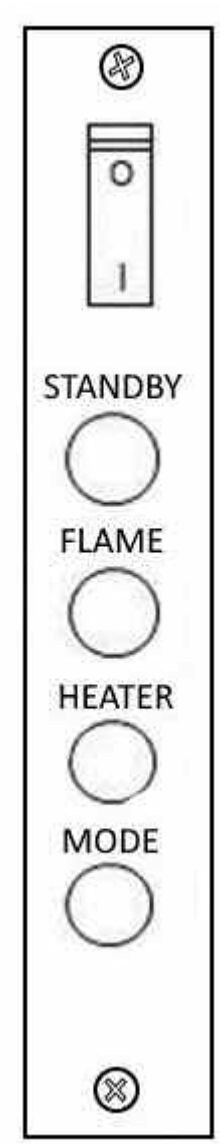

ON / OFF Power Switch
This switch is used to turn the mains supply to the fire ON or OFF.
This needs to be in the ON position for both manual and remote operation.

STANDBY
Used to switch fire ON or OFF into standby mode.

FLAME
Pressing this button will cycle through the 4 different flame brightness levels.

HEATER
Use this button to select Low Heat, High Heat or heater OFF.

When LOW heat is selected the indicator light will glow amber for 5 seconds. When HIGH heat is selected the indicator light will glow red for 5 seconds.

Please note the heater will only operate when the room temperature is below the temperature set on the handset, which can be adjusted using the remote control or app. When the heater switches off, the fan will still continue to run for a short period to allow the fire to cool down.

MODE
Use this button to cycle through and select 1 of the 16 preset LED colour combinations. Press and hold until a confirmation beep is heard to set on 'Colour Animation' mode to slowly cycle through all the colour combinations. Press and hold again until a confirmation beep is heard to clear the setting.

Remote Control

Remove the battery cover on the rear and insert 2 x AAA batteries ensuring the batteries are fitted correctly. Refit the cover. Please ensure old batteries are disposed of responsibly by contacting your local authority about recycling schemes.

Ensure that the ON / OFF Power Switch on the fire is in the ON position.

Pairing your remote control to the fire:

- Check the remote has new working batteries then place remote near to the fire.
- Press and hold the Flame and Mode button on the fire for 3 seconds, after 3 seconds it will beep once, release the button and press any button on the remote.
- Your remote will now be paired with the fire.

Note: Up to 16 remotes can be paired with a single fire.

Un-pairing your remote from the fire:

- Press and hold the Flame button on the fire for 10 seconds, the fire will beep after 10 seconds
- All remotes paired with the fire will now be unpaired.

Fig. 4

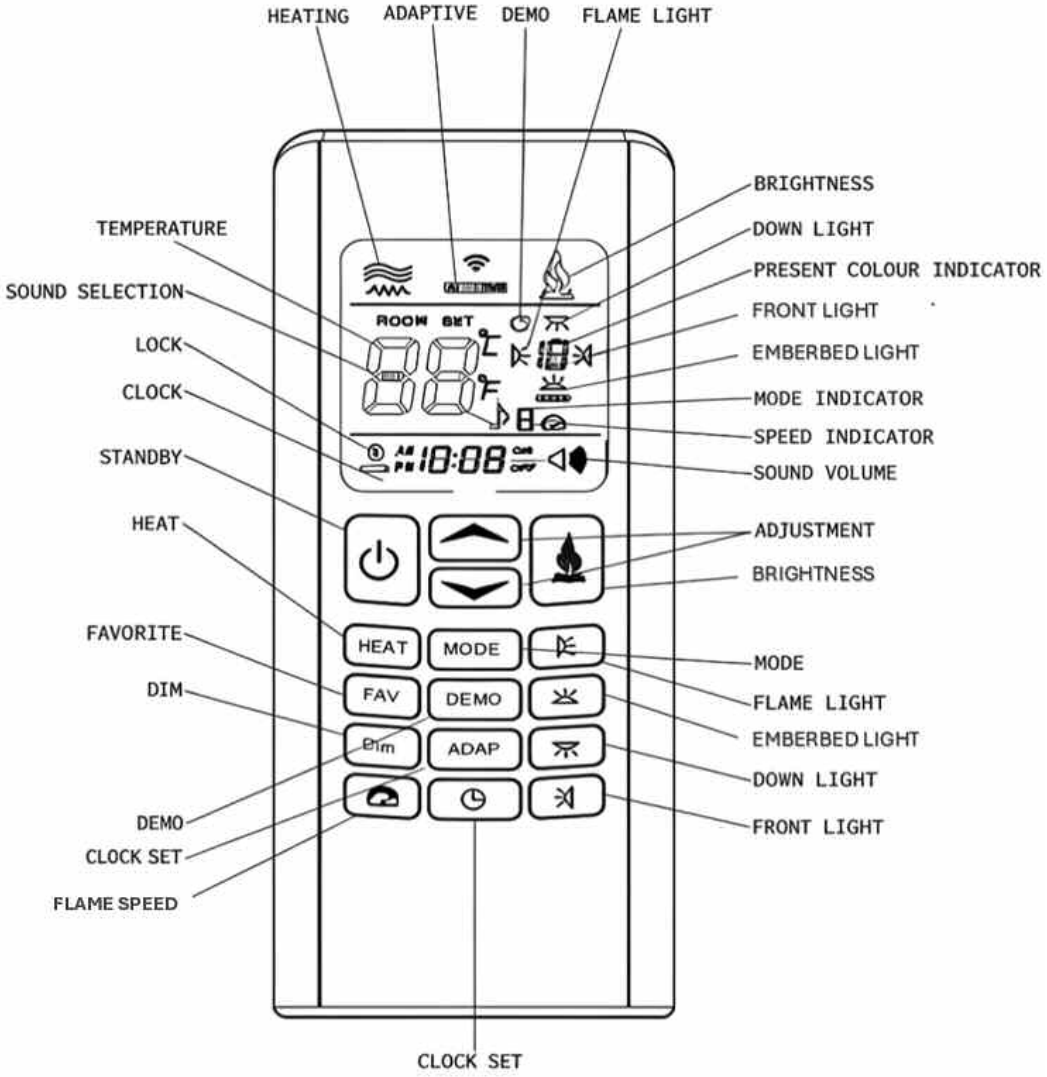

To use the remote handset ensure it is pointed directly towards the fire and press the appropriate button to operate the fire.

Standby Button

1. Press to turn the fire on or off.

Clock / Setting The Time

1. Press the clock set button once, the hour will flash on the remote. Use the arrow buttons to adjust, press the clock set button again to set the minute this will flash, use the arrow buttons to adjust, finally press the clock set button to save the set time.

Brightness Button

1. Press to cycle through the four brightness levels

Heat Setting

1. Press to cycle through the two heating levels High / Low & Off

Note: the heater will only operate when the room temperature is below the temperature set on the handset. When the heater switches off, the fan will still continue to run for a short period to allow the fire to cool down.

Favourite Setting

1. Hold the "Fav" button until an audible beep to save the current light settings, short press the "Fav" button to recall the saved settings.

Adjusting the Desired Temperature

1. With the fire heat on, use the up or down adjustment keys to set the desired temperature, a confirmation beep will be heard from the fire. If the room is already warmer than the set temperature the heater will switch off until the thermostatic sensor detects a fall in temperature. Pressing and holding the “UP” or “DOWN” arrow button for 3 seconds switches the temperature display between Faherenheit & Celsius.

Adaptive Control

1. Adaptive control is a function that will automatically turn high heat on if the room temperature drops below 25°C. The appliance must be turned on.

Setting The Colour Functions

1. Press either the Flame, Emberbed or Downlight buttons to set the colour of each light. The relevant icon will display on the handset and colour setting number will flash, use the up and down arrows to cycle through the colours. Press the selected light button again to save.

Flame **Ember** **Downlight**



Flame Button	**=**	**Rear Flame Lights**
Ember Button	**=**	**Underbed Lighting**
Downlight Button	**=**	**Log Light Projection**

Front Light



2. Press to turn the front lights on or off.

NOTE : Front Button only switches ON or OFF (no adjustment available)

Flame Speed Adjustment

1. Flame speed can be adjusted between setting 1 to 4
2. Press the Speed button to cycle through the four flame speed settings

Set Mode

1. Press mode button. The mode icon will be displayed on the handset a setting number will flash, use the up or down arrows to cycle through 16 preset light modes. Press the mode button again to save.

Dim

1. Press either the Flame, Downlight or Emberbed buttons. Press the Dim button to cycle through the four settings accordingly. (this will dim the brightness of selected light)

Demo Mode

1. Automatic setting where the fire cycles through a full range of colours on a loop, Note: While in DEMO mode other colour options cannot be selected or adjusted. A circular arrow symbol will display on the remote while in demo mode.

Celsi App Control

The Celsi app can be downloaded from the IOS App Store or the Google Play Store by either searching for Celsi or by scanning the QR code using a smart phone or tablet.

The Celsi app can be used alongside the remote handset and provides additional feature of 7 day Timer function.

**** During the initial set up of the App, the fire needs to be in pairing mode ****

Pairing Mode

With the fire ON press the standby button to hear a beep and continue holding for 5 seconds to observe a red flashing light on the rear screen. When this light is flashing the product is in pairing mode.

App Setup

1. Open the app and when prompted either create a new Celsi account or Login using your existing account details.
2. Once logged in, accept the notification to allow permission for the Celsi app to access Notifications and Bluetooth.
3. On your smart device ensure that Bluetooth and Wi-Fi are switched ON.
4. Ensure the fire is in pairing mode.
5. On the app the All Devices screen will be displayed. Press the + button at the top R/H corner.
6. Allow the app to connect to devices on local network.
7. Click on Add button to discover devices.
8. Click on Manual Input and add the name and password of the Wi-Fi network you are connecting the fire to.
9. Follow the on screen instructions to add device.

Using the App

Fig. 5

The Home page of the app will allow you to operate and customise the appearance of your fire using the touchscreen interface as shown opposite in figure 5.

The app has all the same features as the remote handset along with an additional 7 day Timer function. Using this function you can set timers for the fire to switch on at a given time.

Further information is available within FAQ section of the app.

Connection to Alexa

Once you have set up your Celsi account and successfully paired your device you can now also connect to Alexa.

Fig. 6

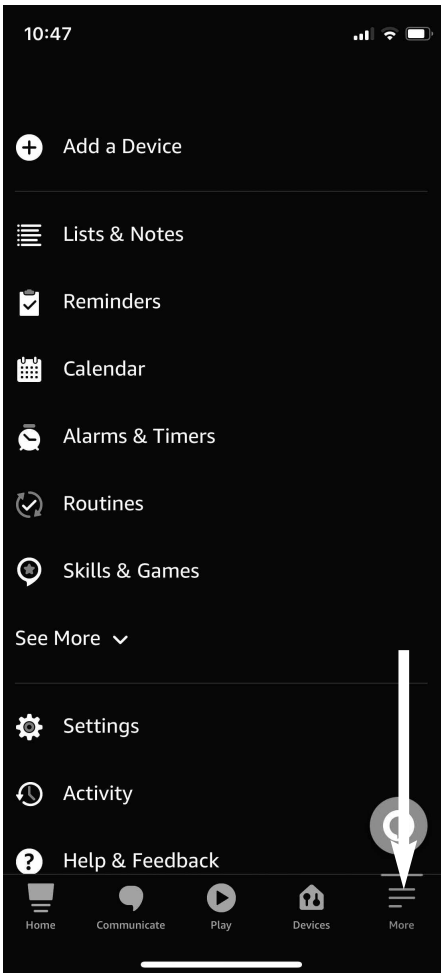

Fig. 7

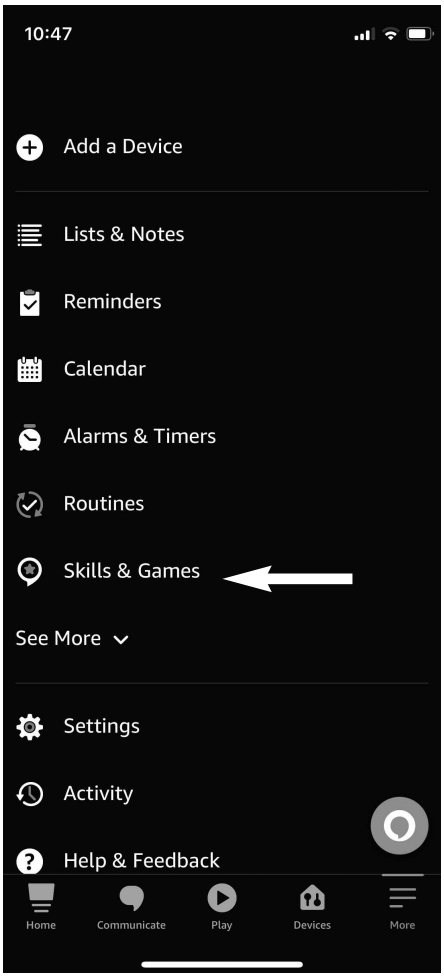

To connect, open the Alexa App and select the “More” tab in the bottom right hand corner as shown in figure 6 above.

Then select the “skills and games” tab as indicated in figure 7 above.

Then click the "search" icon in the top right hand corner as shown below in figure 8, then search for the "smart life" skill by typing "smart life" into the search box as shown below in figure 9.

Fig. 8

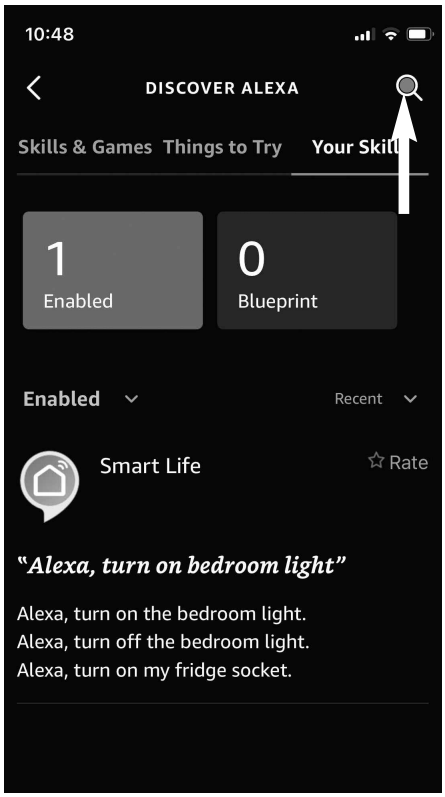

Fig. 9

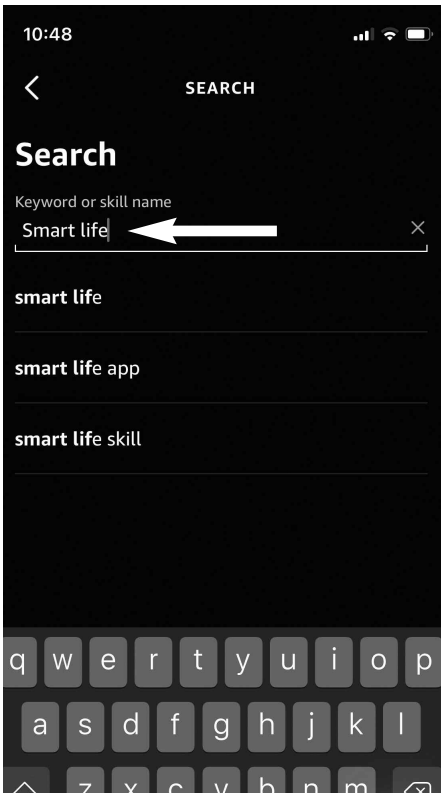

Install onto your device by clicking the "smart life" icon shown below in figure 10, then the "enable to use" icon as shown in figure 11.

Fig. 10

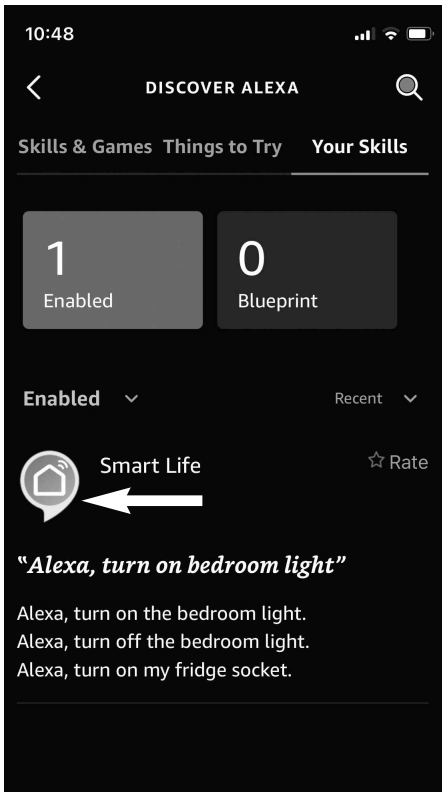

Fig. 11

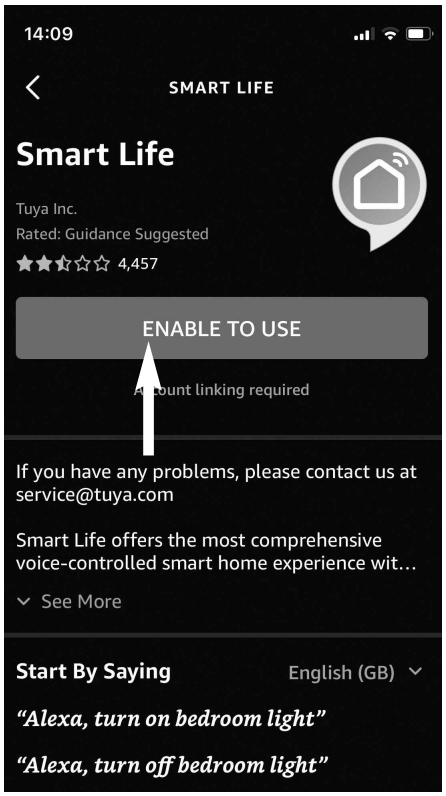

This will prompt you for your e-mail address and password that you used when registering the Celsi APP as shown below, enter the e-mail address and tick the user agreement box as indicated below in figure 12.

Complete the verification puzzle as prompted, then enter your password and complete a second verification puzzle as requested.

This will then bring up the confirmation page that the account has been successfully linked as shown below in figure 13.

Fig. 12

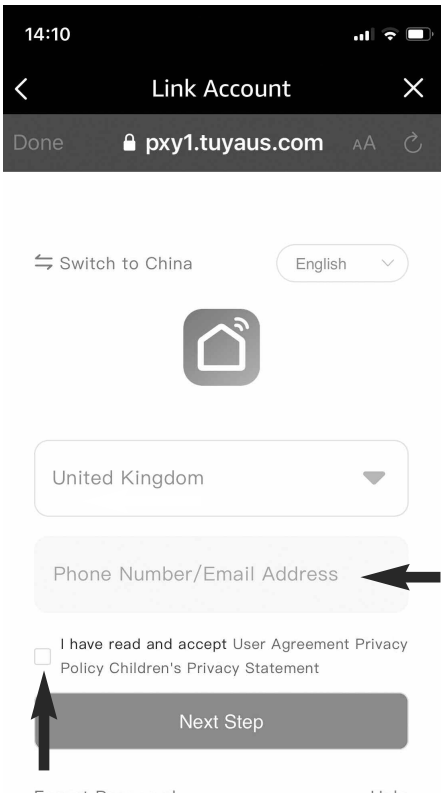

Fig. 13

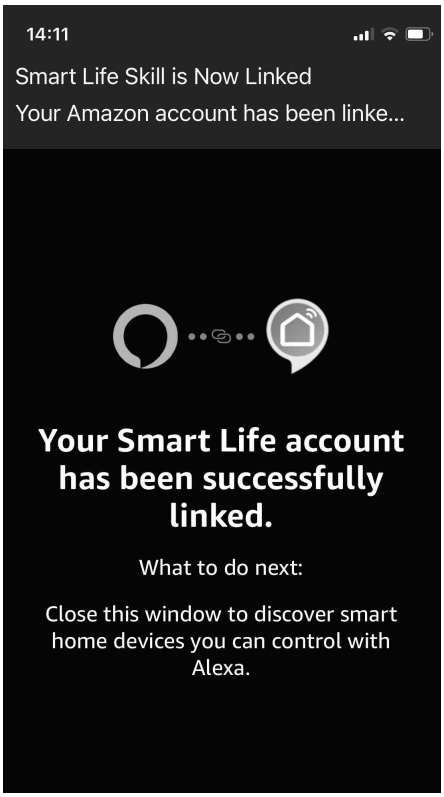

The product should then operate from voice activation.

i.e. “Alexa, turn fire on”, “Alexa, turn fire off”.

Connection to Google Assistant

Once you have set up your Celsi account and successfully paired your device you can now also connect to Google Assistant.

Fig. 14

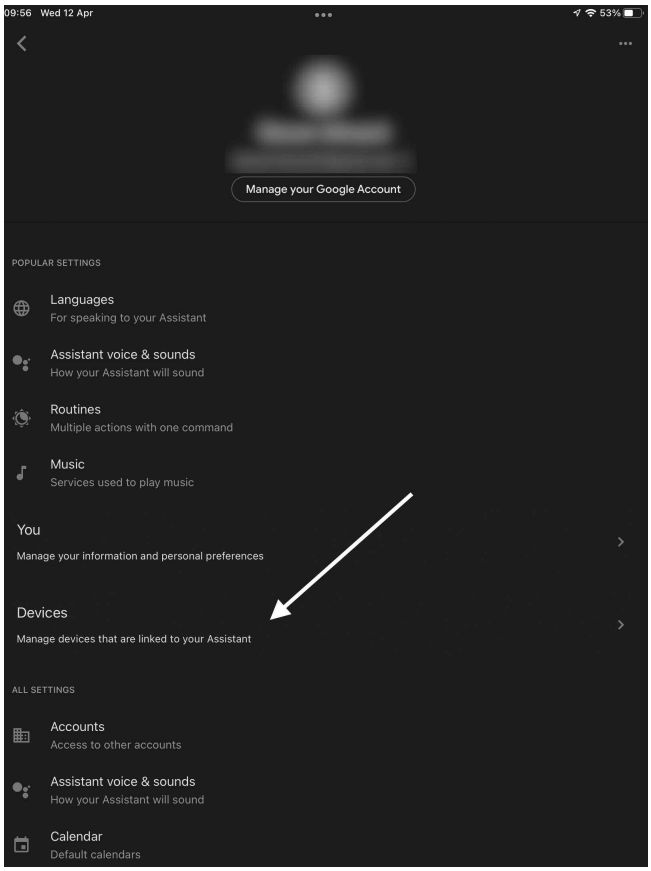

Fig. 15

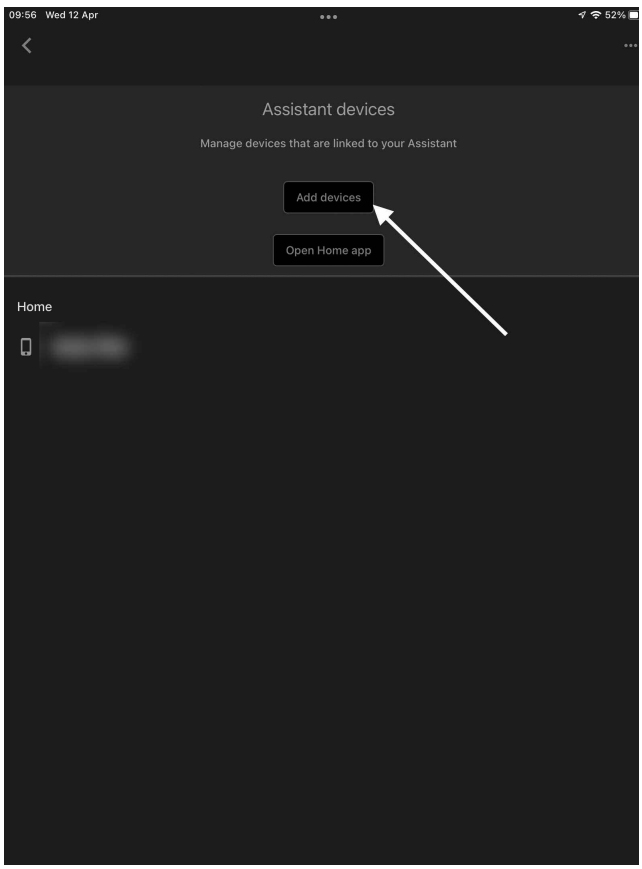

To connect, open the Google Assistant App and select the “Device” tab on the left hand side as shown above in figure 14, then click the “add devices” tab when prompted as shown above on the right in figure 15.

Then select the “link a smart home device” tab as indicated overpage in figure 16.

Select the “link a smart home device” tab as indicated below in figure 16.

Fig. 16

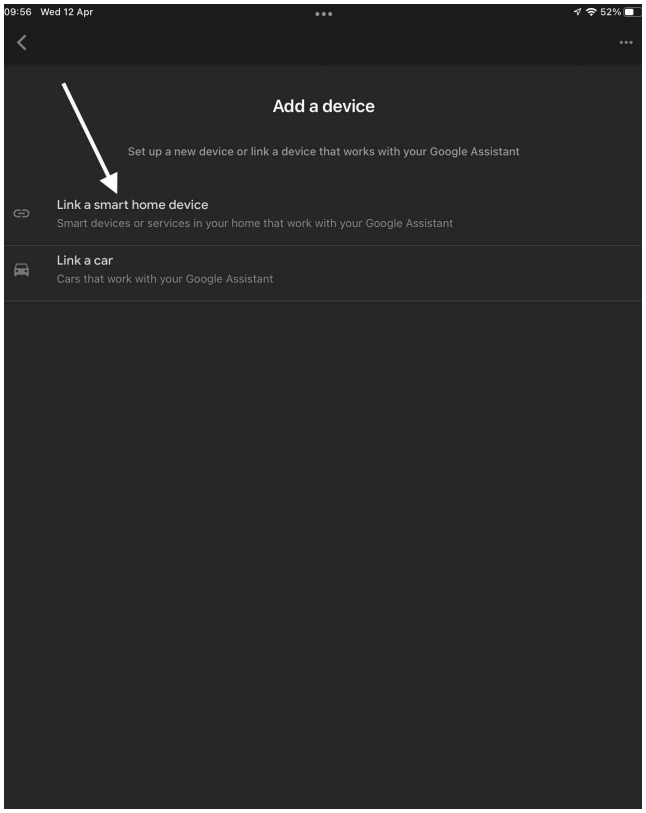

Fig. 17

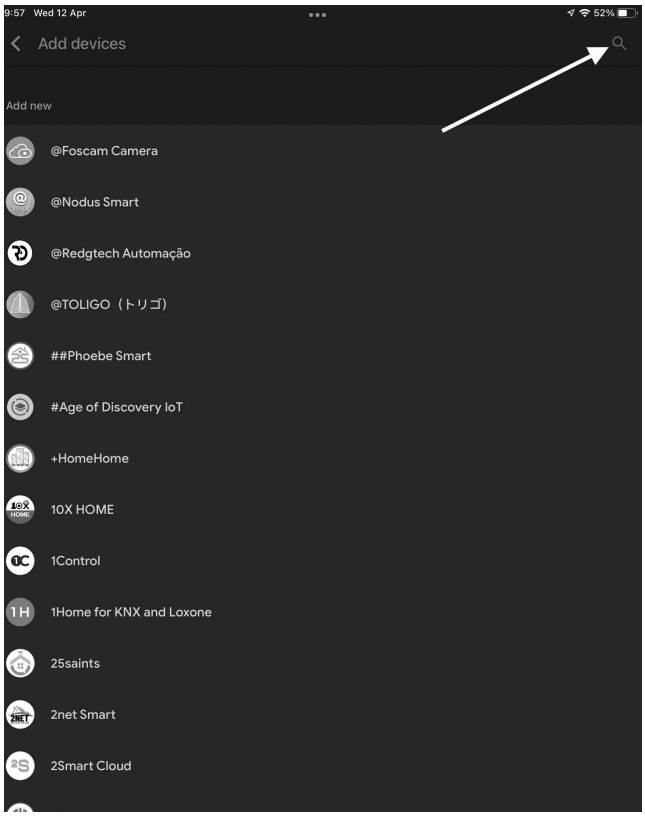

Click the “search” icon in the top right hand corner as shown figure 17 above, then enter “smart life” as the searched for as shown in figure 18. Select the “smart life icon as shown in figure 19 below.

Fig. 18

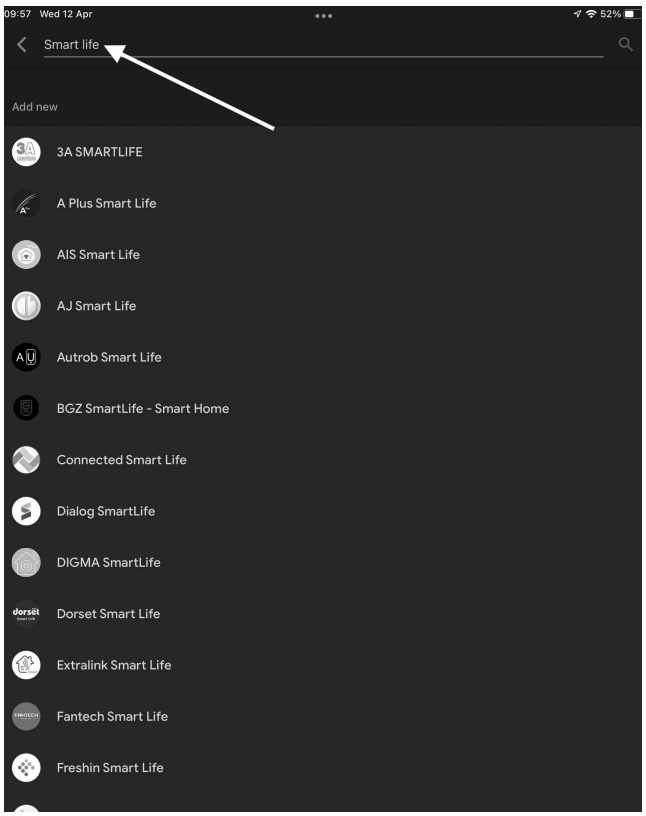

Fig. 19

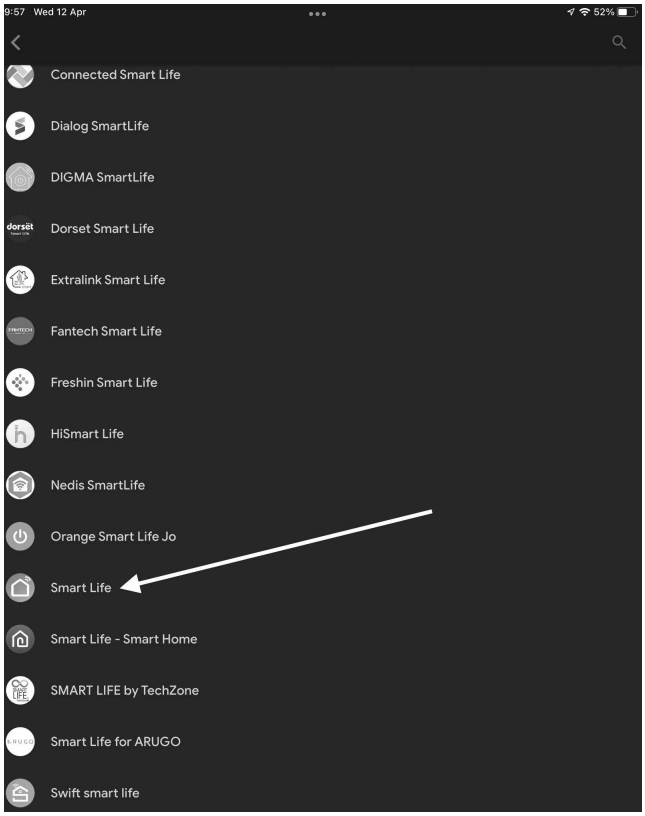

This will prompt you for your e-mail address and password that you used when registering the Celsi APP as shown below, enter the e-mail address and tick the user agreement box as indicated below in figure 20.

Fig. 20

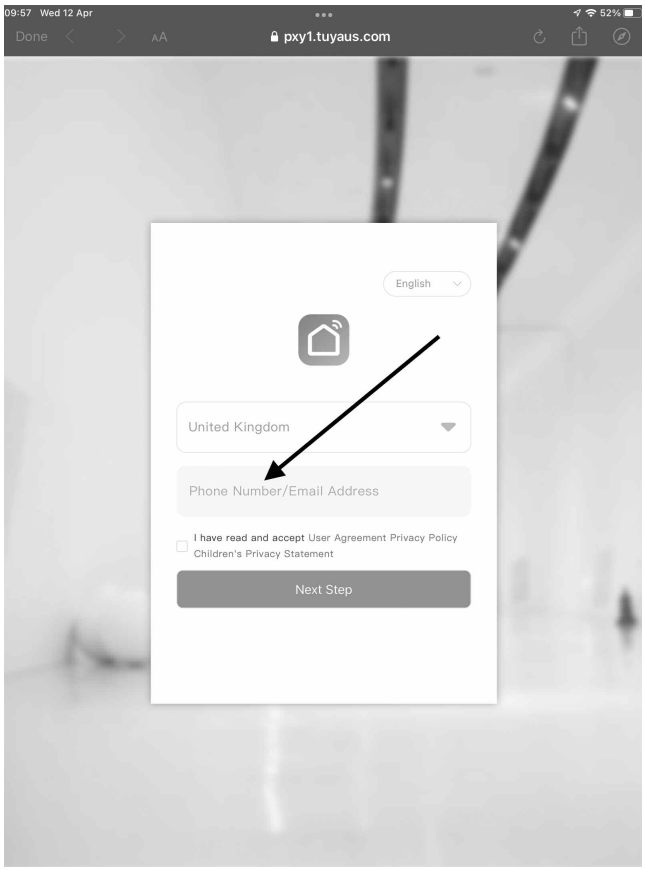

The product should then operate from voice activation, open the google assistant app, click then click the microphone logo at the bottom centre and give instruction i.e. "turn fire on", "turn fire off" as shown in figure 21 below.

Fig. 21

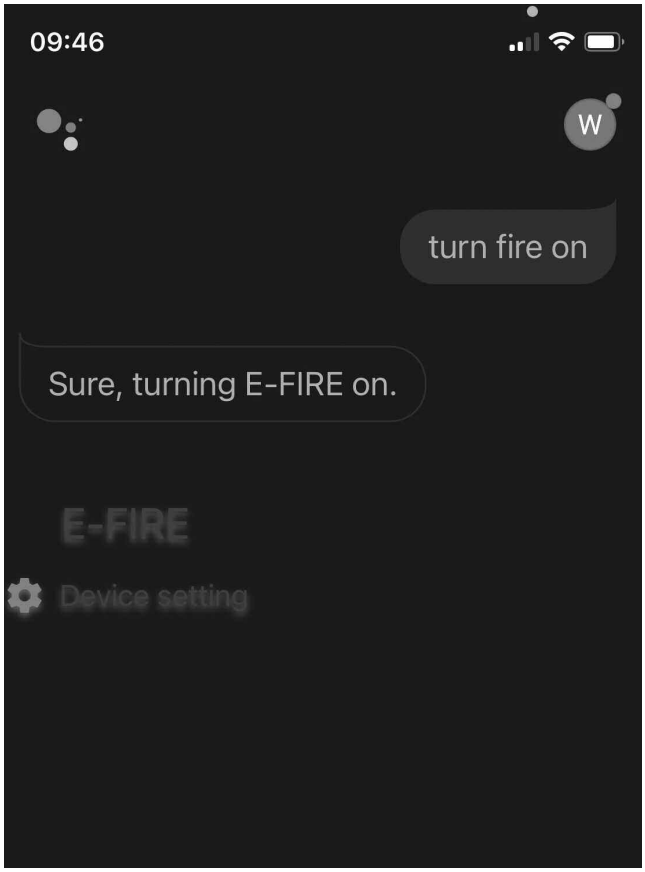

IMPORTANT

This fire is fitted with an automatic thermal cut-out safety feature to reduce the risk of damage to fire due to overheating. If the fire overheats the heater element will cut out whilst the fan will still continue to run to allow the fire to cool down sufficiently.

Once the fire has cooled down the thermal cut-out will reset itself and switch the heater back on. If the problem persists switch the fire off and disconnect the power at the switch and plug socket. Check that the heater warm air outlets and the inlets are not obstructed (the outlets and inlets are situated on the underside of the fire body).

If the heater is still not operating correctly disconnect the fire and seek expert advice.

Maintenance Instructions

Always remove the plug from the socket-outlet and allow the heater to cool down before cleaning. User maintenance should only be carried out by a competent person.

Light accumulated dust may be removed from the fire with a soft dry cloth.

The exterior surface of the fire can be cleaned with a soft damp cloth (not dripping wet). Dry the exterior surface before operating the heater.

Household glass cleaner can be used on the fire glass.

WARNING!

Do not immerse the heater in water.
Do not use any cleaning chemicals such as detergents and abrasives.
Do not allow the interior to get wet as this could create a hazard.

In the event of malfunction contact the manufacturer, do not try to repair the heater yourself as this may result in a fire hazard or electric shock.

Environment

Fig. 22

Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection services available in your local area. If electrical appliances are disposed of in landfills or dumps hazardous substances can leak into the groundwater and get into the food chain, thus damaging your health and wellbeing.
When replacing old appliances with new ones the retailer is legally obligated to take away your old fire for disposal free of charge.

Warranty

Congratulations on the purchase of your electric fire. This fire by BFM Europe Ltd is guaranteed for 5 years from the date of purchase against faulty materials or workmanship.

If purchased in the UK please note the 5 year guarantee comprises of 24 months of parts and labour with an extended 36 months of parts only If your fire is found to be defective within 24 months from the date of purchase, we or our authorized agent will repair the faulty component on site.
If purchased in the EU please consult the guarantee card that is supplied with your product by the approved Celsi Fires retailer for warranty terms and conditions.

This warranty does not cover consumable items which have a limited lifespan.
If a problem should occur, the nature of the problem together with the date of purchase and installer information should be immediately reported to the retailer that the fire was purchased from. Proof of purchase will be required so the original invoice should be retained.

B-1046854
Issue 1

CELSI
...the future of fire

BFM Europe Ltd
Gordon Banks Drive
Trentham Lakes
Stoke-on-Trent
ST4 4TJ

Technical Queries: 01782 339039
Service Fault Enquiries: 01782 339008

Spare Parts - www.bfm-partfinder.co.uk